


BE260

INFRARED PERIMETRAL BARRIER

DOUBLE BEAMS

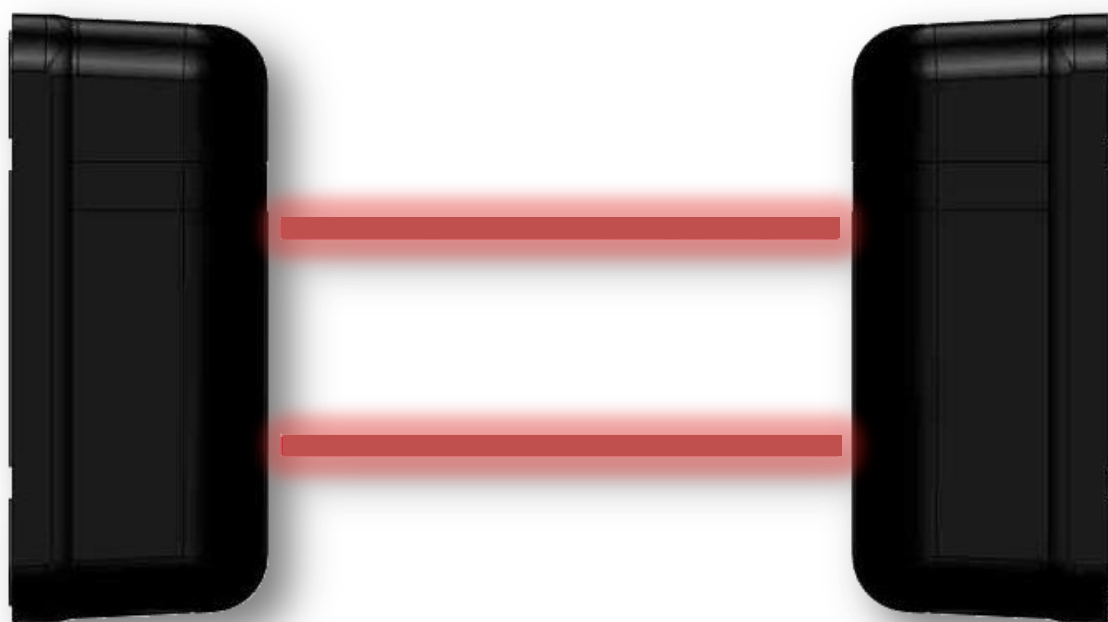

CAME



FA00528-EN

1	MAIN COMPONENT LIST	Pag. 3
2	INSTALLATION TIPS	Pag. 5
3	INSTALLATION	Pag. 6
	WALL MOUNTING	Pag. 6
	POLE MOUNTING	Pag. 6
4	CONNECTIONS AND DESCRIPTORS	Pag. 7
	CABLE AND WIRING	Pag. 7
	TRANSMITTER/RECEIVER	Pag. 8
5	FREQUENCY SELECTION	Pag. 9
6	ALIGNMENT TEST	Pag. 9
7	SETTING TIME	Pag. 11
	TIME CHOICE	Pag. 11
8	ENVIRONMENTAL DISQUALIFICATION	Pag. 13
9	ADDITIONAL TAMPER	Pag. 13
10	TECHNICAL FEATURES	Pag. 14

Installation recommendation

- *Verify that the beam tower is fully watertight once the cover and end caps have been correctly filled at the end of the installation.*
- *The missed use of proper accessories decrease the IP grade protection of the product.*
- *Avoid any type of obstruction between the transmitter and receiver.*
- *Avoid installation of receivers beams in a position where are exposed to direct sunlight (with same angle), especially at sunset and sunrise.*
- *Do not install multiple beams where the transmitter beam can interfere with other receiver beams. It is always better place either transmitter or receivers back to back.*

1. MAIN COMPONENT LIST

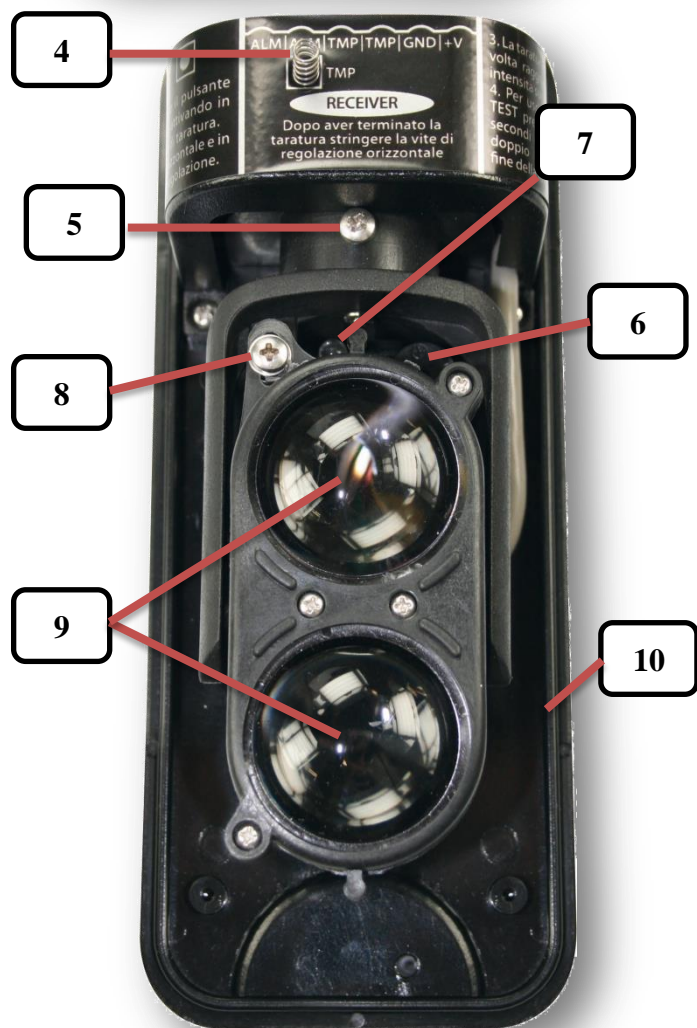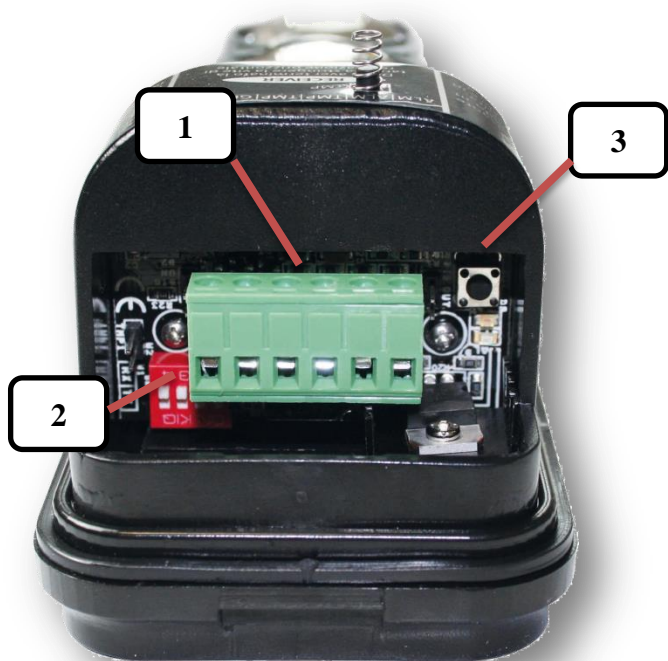

1	Terminal Block
2	Channel selector
3	TEST button
4	Tamper Switch
5	Horizontal adjustment screw
6	Adjustment Buzzer (RX)
7	Adjustment high frequency led (RX)
8	Vertical adjustment screw
9	Lens
10	Unit base



**IR
COVER**



**MOUNTING
PLATE**



**“U” BRACKET
FOR POLE
MOUNTING**

2. INSTALLATION TIPS

For proper installation of the product is necessary to remove all possible obstacles between the transmitter and receiver (trees, grass, etc.), use for the installation immovable poles or walls firmly anchored to the ground.

You should also always use cables with screen for alarm connections, proper sizing by taking more precautions due to electronic devices.

To avoid interfering with the performance and the degree of protection (IP) of the barrier is necessary to take the necessary precaution, taking care not to alter seals, plastic and mechanical parts of the product, using original accessories.

In case of repairs covered by warranty (2 years) but with obvious signs of improper installation, the Politec s.r.l. reserves the right to decide on any repair costs.


Avoid installing the receivers beams in a position where direct sunlight, at the same angle as the receivers beams, can enter directly into optics especially at sunset and sunrise

3. INSTALLATION

The barrier ALES can be installed to the wall using the mounting plate and the pole using the mounting plate and the "U" bracket (Pole Ø 48-50).


WALL MOUNTING

1. Insert the cable alarm screen in the hole of the plate and fix to the wall with screws.
2. Pass the cable through the gasket in the base and anchor on the same plate. Make connections to the terminal.
3. Following the calibration and verification of proper operation of the system, replace the IR Cover.

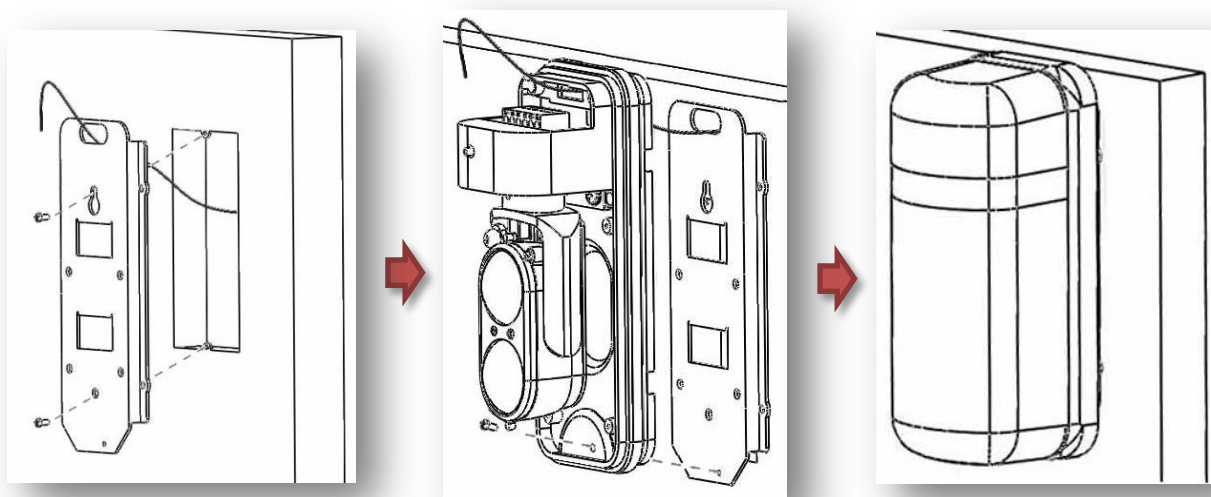

POLE MOUNTING

1. Insert the screened cable for alarm in the hole of the plate and fix the plate to the pole using the "U" bracket.
2. Pass the cable through the gasket in the base and anchor on the same plate. Make connections to the terminal.
3. Following the calibration and verification of proper operation of the system, replace the IR Cover.

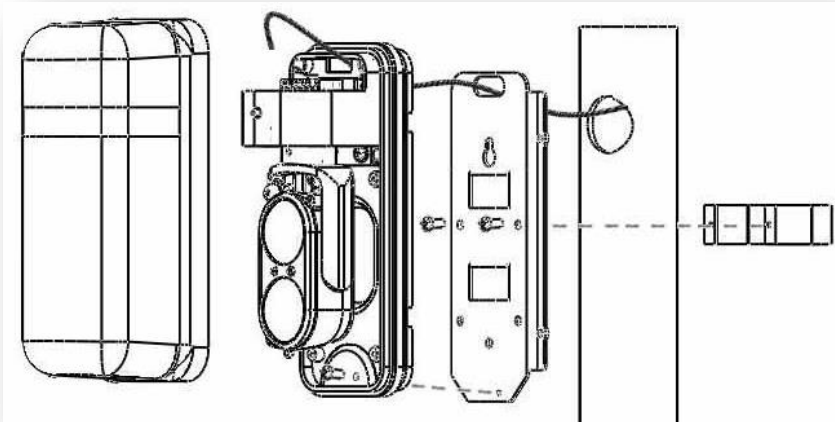

4. CONNECTIONS AND DESCRIPTIONS

The wiring requires the shielded power cable 12Vdc (ex. 2x0.5 + 8x0.22) with the metallic shield connected to ground to prevent the introduction of disturbances of the alternating voltage on the barrier.




The cable size depends on the consumption of the columns and the resistance of the cable

The table shows the cable cross-sections and the relative distances to ensure optimal performance using the supplied LAR22 (2-12Vdc, 5A) and a barrier ALES.

SIZE CODUCTOR	POWER SUPPLY 12Vcc
0,5 mm ²	165 m
0,75 mm ²	245 m
1,5 mm ²	490 m
2,5 mm ²	820 m

BODY METAL SUPPLY LAR22 IS NOT WATERPROOF AND WILL NOT BE PLACED OUTSIDE THE PREMISES WITHOUT BEING PLACED IN TURN INSIDE A SEALED CONTAINER

TRANSMITTER / RECEIVER

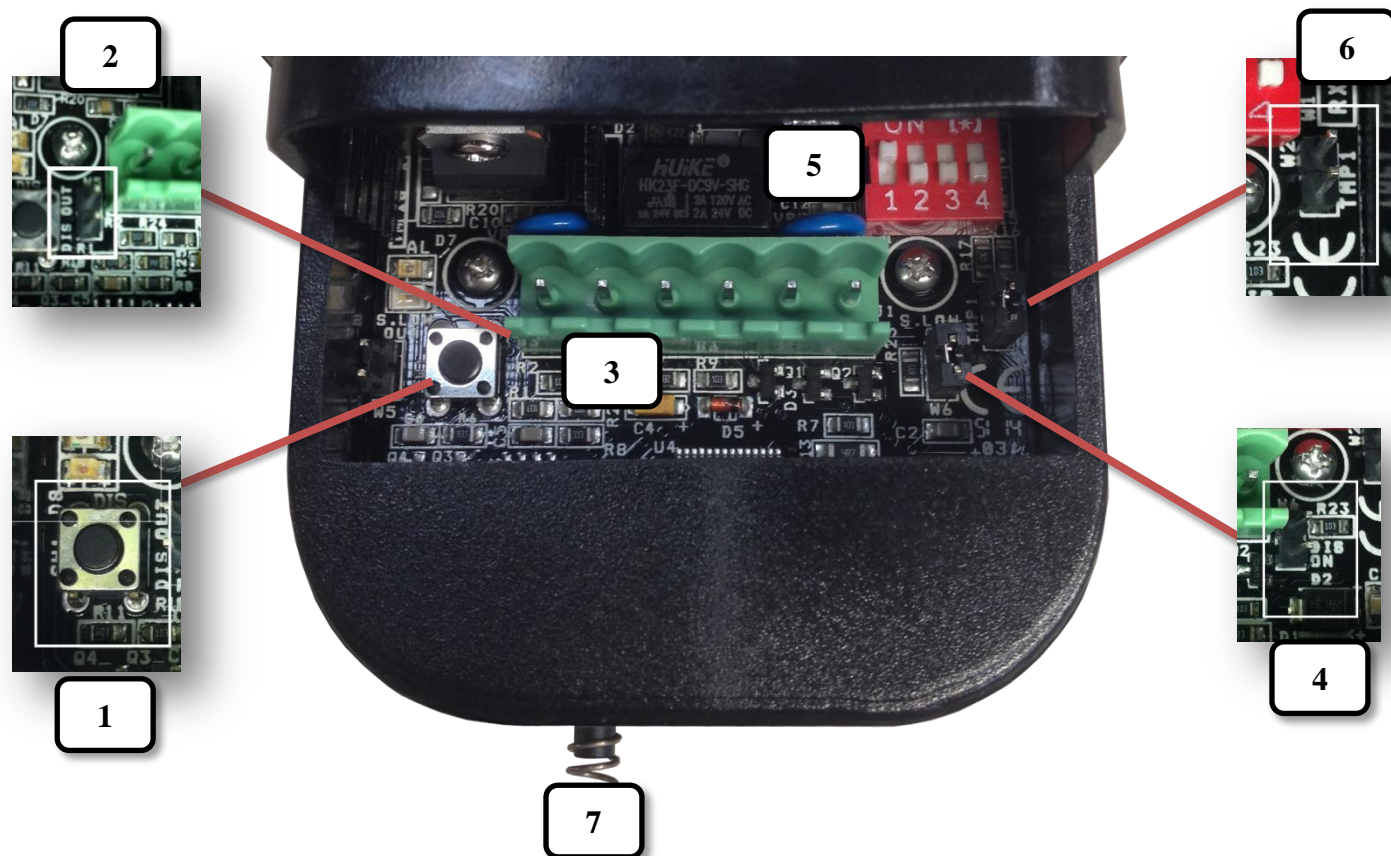


1	TEST BUTTON (only RX)	when pressed allows you to access the functions of alignment
2	DIS OUT (only RX)	In case of disqualification activated gives output signal (NEGATIVE OPEN COLLECTOR)
3	TERMINAL BLOCK	<div>1</div> <div>2</div> <div>3</div> <div>4</div> <div>5</div> <div>6</div> <div>ALARM CONTACT N.C. (only RX)</div> <div>TAMPER CONTACT</div> <div>GND</div> <div>POWER SUPPLY 10 - 30 Vdc</div>
4	DIS ON (only RX)	With inserted jumper enables the environmental disqualification and the monitoring output Dis Out
5	CHANNELS SELECTOR	Moving the dip switch in ON (one at a time) enables a transmission channel, the same set to the TX must be corresponding to that of the RX
6	TMP 1	Tamper input additional, in case of absence MUST remain closed by jumper
7	TMP	Tamper anti cover removal

5. FREQUENCY SELECTION

To compose barriers or dams with more than one pair of Ales, it is necessary to avoid interference assign a different channel to each of them. To do this you must turn ON dip switches on the desired channel on the mother board. The channel will be the same from both the transmitter from the receiver


(ex. CH_TX1→CH_RX1 – CH_TX2→CH_RX2 – CH_TX3→CH_RX3 – CH_TX4→CH_RX4).

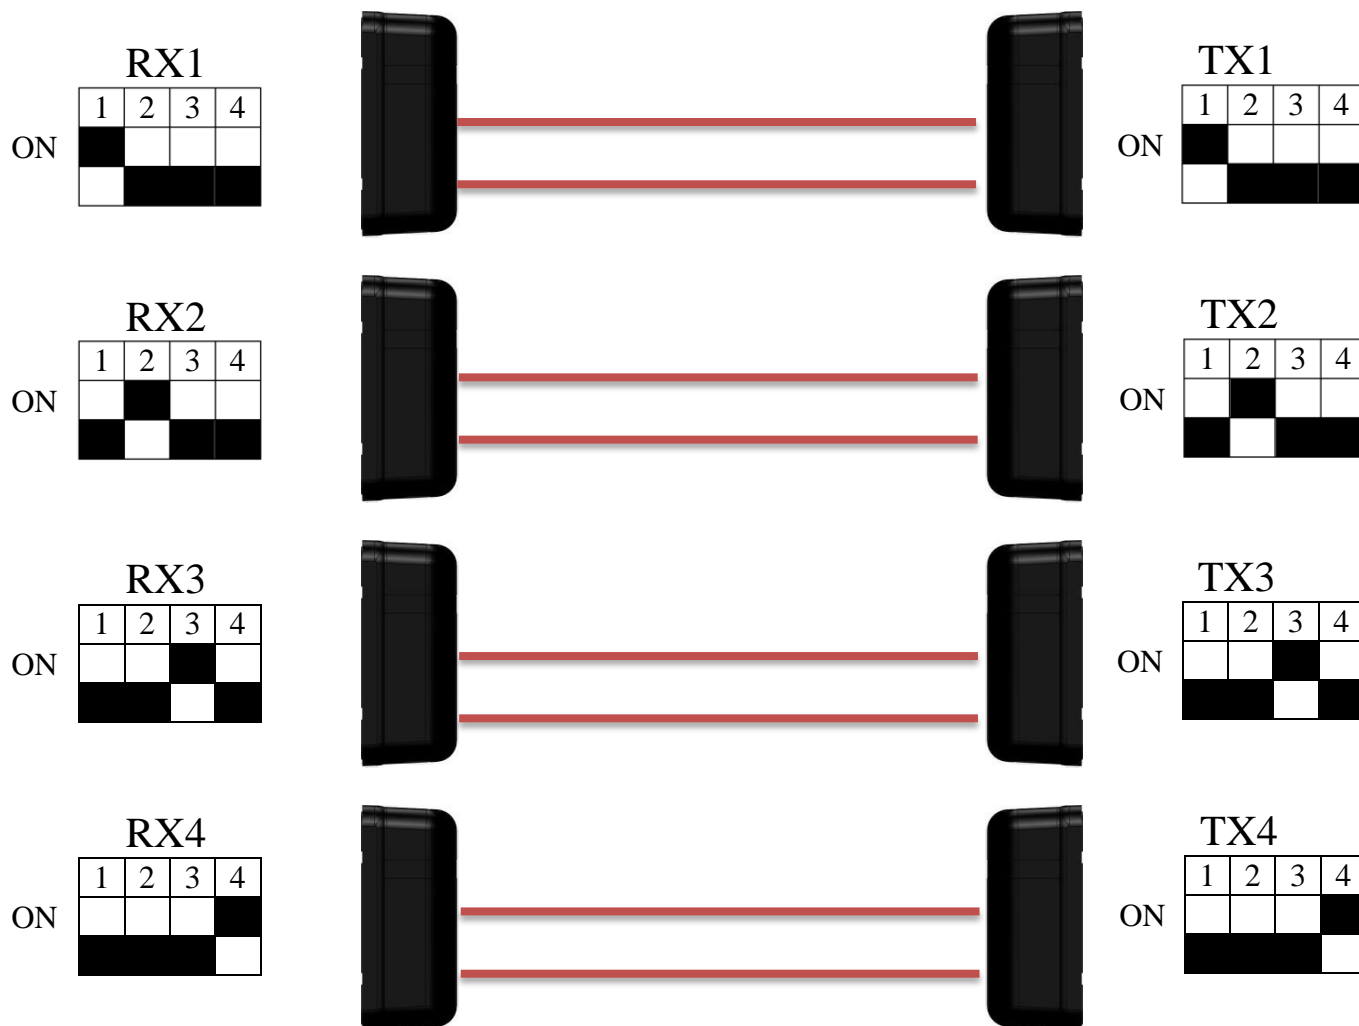

6. ALIGNMENT TEST

Press the TEST button on the RX mother board for 3 seconds until the buzzer will beep twice, accompanied by two blinking of LEDs, to begin calibration.

1. Press the TEST button on the RX Column

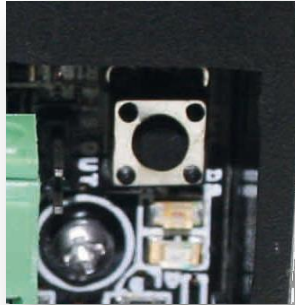


2. Power on of buzzer and LEDs on RX column




CAME

3. Align the optics placed in the column TX to RX, vertically and horizontally by turning the adjustment screws (horizontal and vertical) to find the maximum alignment. The condition of maximum alignment will be achieved when the LEDs are fixed and the buzzer will sound continuously. The condition of partial or total misalignment is indicated by flashing LEDs and low frequency whistle of buzzer.

► Buzzer sounds continuously for max 3 minutes

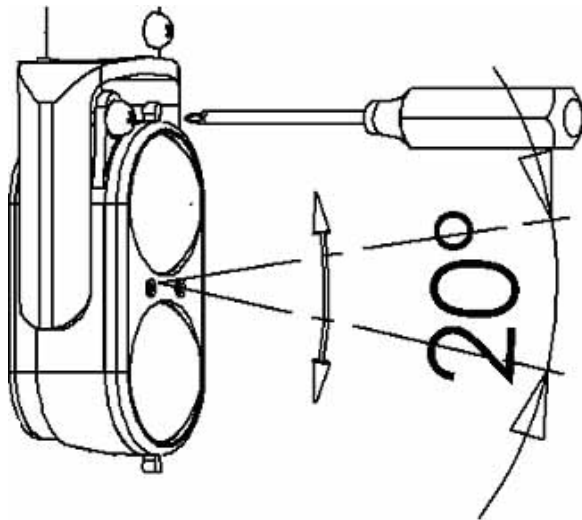

1. Vertical adjustment

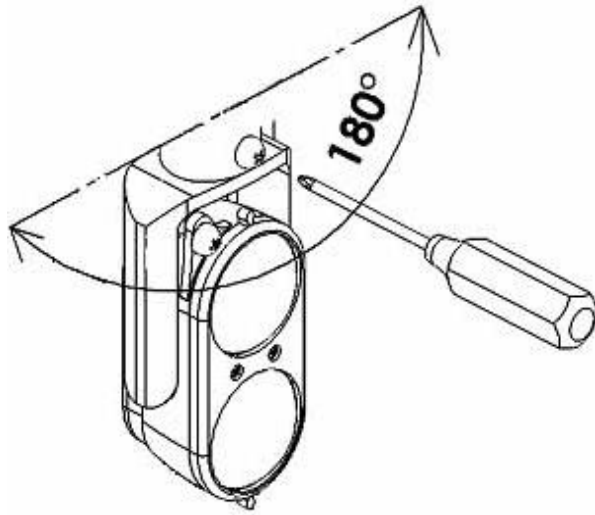

2. Horizontal adjustment

To get a good alignment is necessary to make a complete rotation on the optics receiver horizontal axis, thus effecting the SCANNING of the optical signal.

4. After obtained the calibration tighten the screw for horizontal adjustment, and exit from TEST mode by pressing the TEST button for 3 seconds on RX mother board. Two beeps of buzzer will indicate the end of the TEST function.

► After adjusting for the next 3 minutes each alarm event will be highlighted by a beeper

7.SETTING TIME


You can adjust the operating time of the optics such that the system goes into alarm, depending on usage and the location where it is installed in order to avoid false alarms.

CONFIGURATIONS:

Standard (t = 50 ms)	Intercept run
t = 250 ms	Pets disqualification
t = 500 ms	Wall application
t = 750 ms	Particular application


TIME CHOICE

- Press the TEST button and perform the alignment.
- When alignment is performed, press the TEST button to exit the alignment mode and wait for the two consecutive beep of the buzzer.
- If you need the standard 50 ms delay time is not necessary to continue to the next step but wait for the confirmation BEEP at the end of the 5 seconds.
- Re-press the TEST button within 3 seconds at a time until you hear two consecutive BEEP to activate the mode of action 250 ms, continue to press the TEST button until you hear three consecutive BEEP and activates the mode of action 500 ms. And 'possible to obtain the means of intervention 750ms taking further down the TEST button until the fourth consecutive BEEP.
- To reset the time back to the first point of intervention.

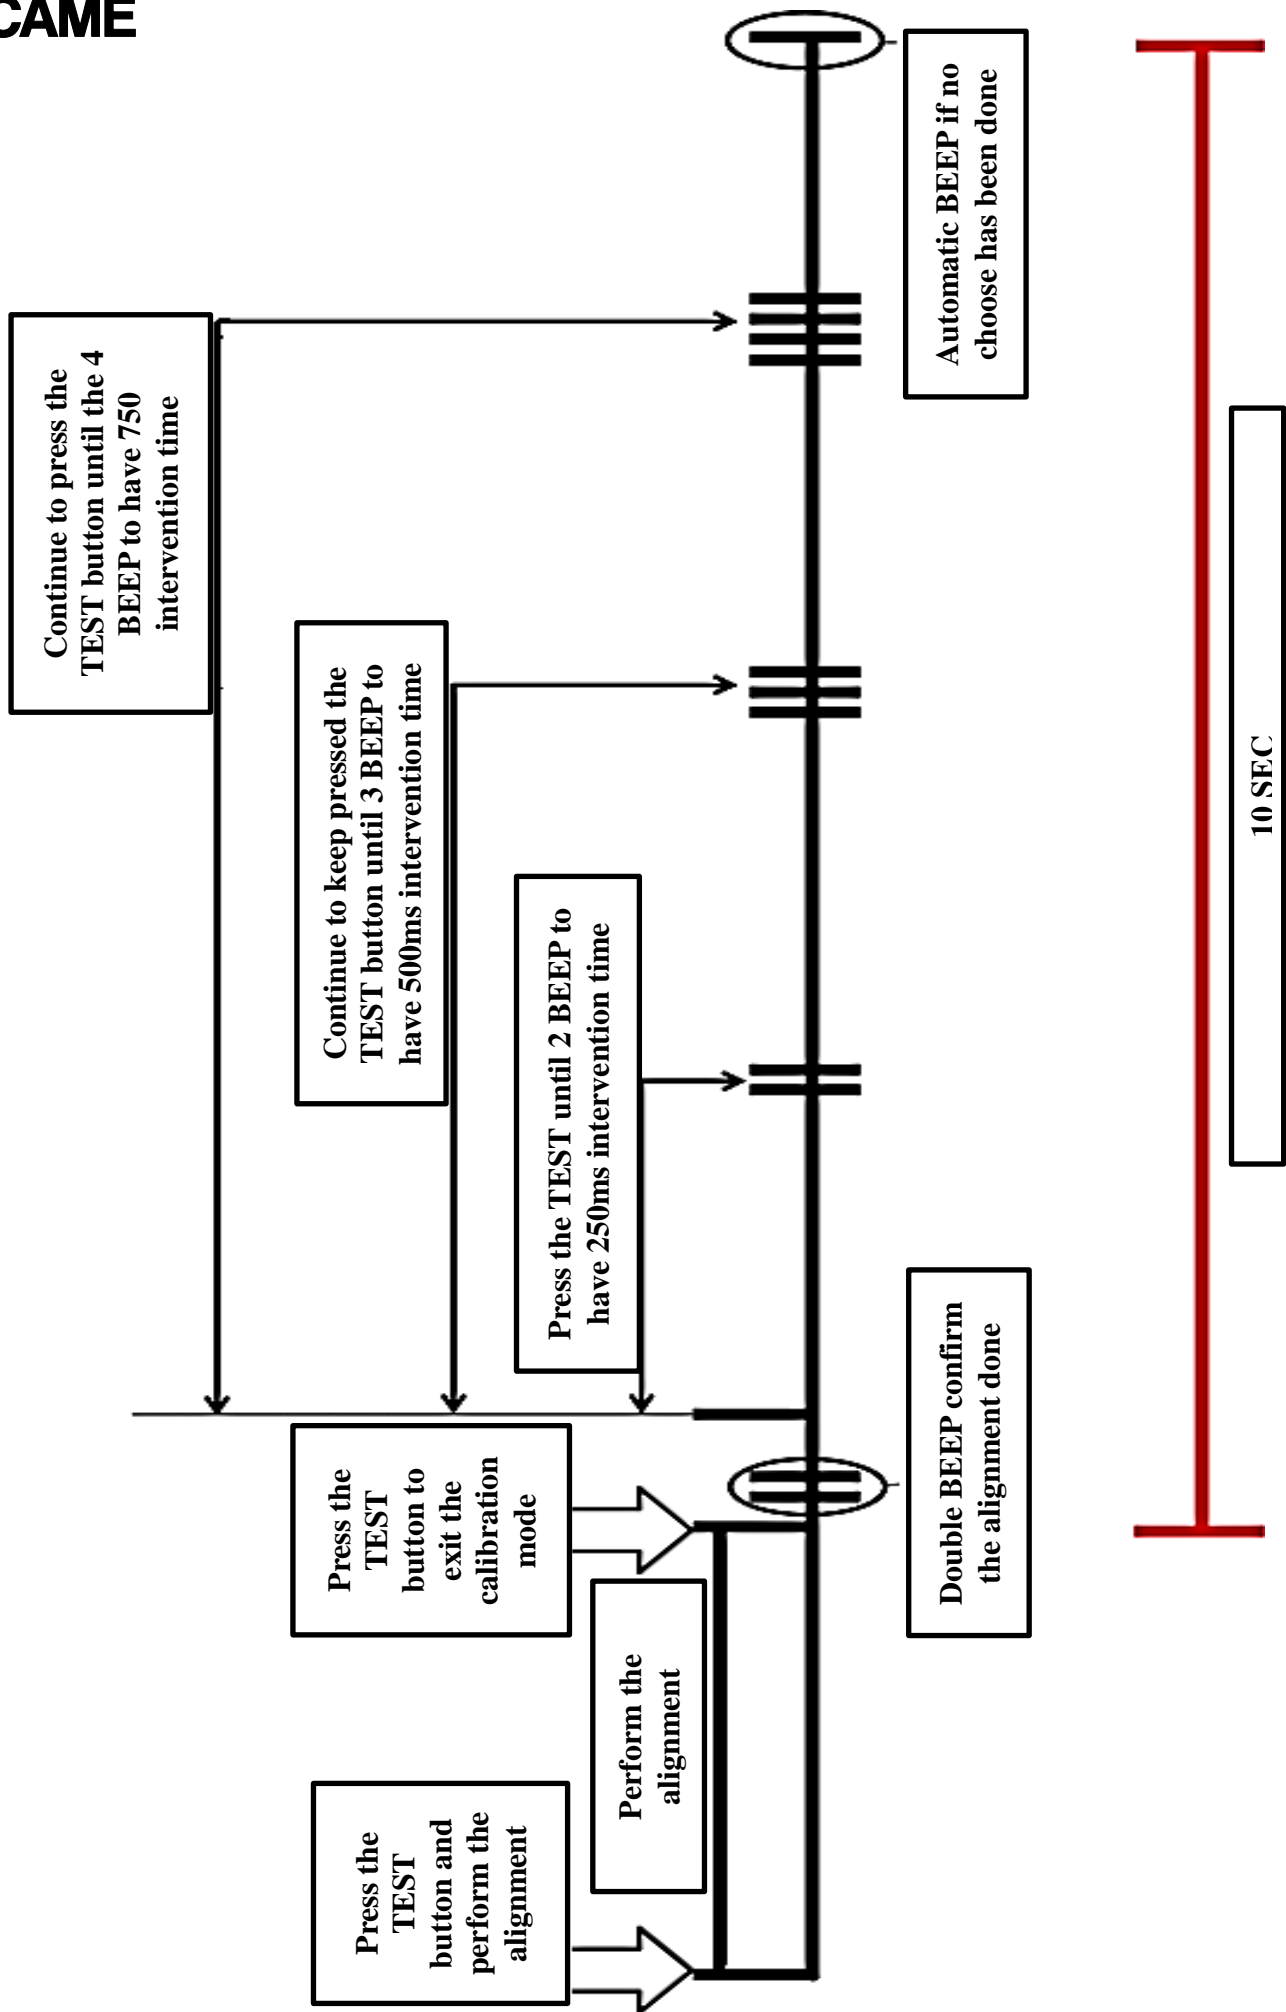


8. ENVIRONMENTAL DISQUALIFICATION

To obtain the message in the control panel of environmental disqualification, you must insert the jumper in DIS ON and connect a "OPEN COLLECTOR NEGATIVE" to the output DIS OUT. This feature allows output to the control panel of environmental disqualification, for which the barrier is in a standby state, this will avoid annoying false alarms caused by weather conditions.

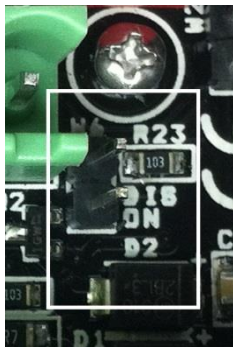


1. Insert jumper in DIS ON.

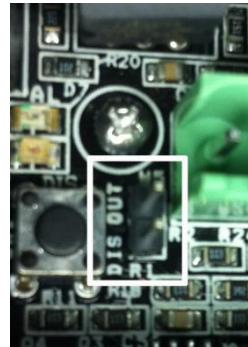

2. With the supplied cable connect the output OUT DIS (open collector negative) to bring the output in the control panel

9. ADDITIONAL TAMPER

On mother boards TX and RX there is a supplementary Tamper input useful to add a wall tamper. In case of absence of additional Tamper, Check the closing of the contact by a jumper.

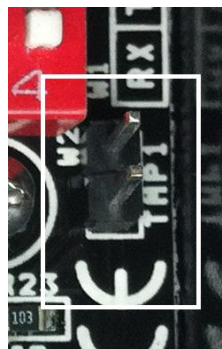

Tamper input additional, in case of absence
MUST be closed by jumpers.

10. TECHNICAL FEATURES

	ALES 60/120
Max range indoors	250m / 480m
Max range outdoors	60m / 120m
Synchronization	4 optical channels
Enviromental disqualification	Yes with open collector output
Setting intervention time	4 settings
Power supply	10-30Vcc
Operative current consumption	90mA
Heaters consumption (couple)	Optional with thermostat 10-30V: 10/15V = 6W, 0.4 A cad. 20/30V = 6W, 0.2 A cad.
Tamper output	contact NC
Operating temperature	-25° (with Heather) +65°
IP protection	IP65
Mounting brackets for wall/pole	
TOTAL WARRANTY 2 YEARS	

11. F.A.Q.

• I can't find alignment

- Check no obstacles are placed between TX and RX and site conformation not gives itself an obstacle to installation;
- Check arrival supply tension to terminal block;
- Use a screened cable to supply barriers, connecting screen to GND on terminal block(it is suggested, if problem is not solved, to use two different screened cables, one to supply and one for alarm/tamper output);
- Check correct dimension of cable used to supply barriers
- Make sure that no other external lights are interesting RX side, during function TEST (gate photocell, any other barrier, infrared lights, exc...).
- It is possible to increase barrier screening, connecting to GND a cable coming from the screw that link sensor base to metallic bracket;

• After best signal achieved (LEDs are fixed and buzzer sounds continuously) barrier stays in alarm

- Make sure RX and TX have same channel;
- Make sure that no other external lights are interesting RX side, during function TEST (gate photocell, any other barrier, infrared lights, exc...).
- Use a screened cable to supply barriers, connecting screen to GND on terminal block(it is suggested, if problem is not solved, to use two different screened cables, one to supply and one for alarm/tamper output);
- Check correct dimension of cable used to supply barriers;
- It is possible to increase barrier screening, connecting to GND a cable coming from the screw that link sensor base to metallic bracket;

• System in alarm with fog or rain

- Make sure environmental disqualification is activated;
- Make sure columns are well closed and check inside there are no presence of water or insects;
- Check the precision of alignment and in case remake alignment TEST, making sure that no other external lights are interesting RX side (gate photocell, any other barrier, infrared lights, exc...);
- To obtain a more precise alignment position a side of ales IR plastic cover in front of the lenses, during the alignment test, to have a double attenuation of beam;
- For long range protection is suggested the use of thermostat warranting an enough supply to it.

- **Repeated false alarms**

- Use a screened cable to supply barriers, connecting screen to GND on terminal block(it is suggested, if problem is not solved, to use two different screened cables, one to supply and one for alarm/tamper output);
- Check correct dimension of cable used to supply barriers;
- It is possible to increase barrier screening, connecting to GND a cable coming from the screw that link sensor base to metallic bracket;
- If a switching power supply is used, substitute it with a "linear" one to reject any kind of electrical power disturb from line;
- If possible, increase the alarm delay up;

COMMERCIAL PRODUCT

Came S.p.A. – Via Martiri Della Libertà 15 – IT-31030 DOSSON DI CASIER (TV)
TEL (+39) 0422 4940 – FAX (+39) 0422 4941 – info@came.com – www.came.com